



Portable DVD Player with ATSC TV

Quick Start Guide

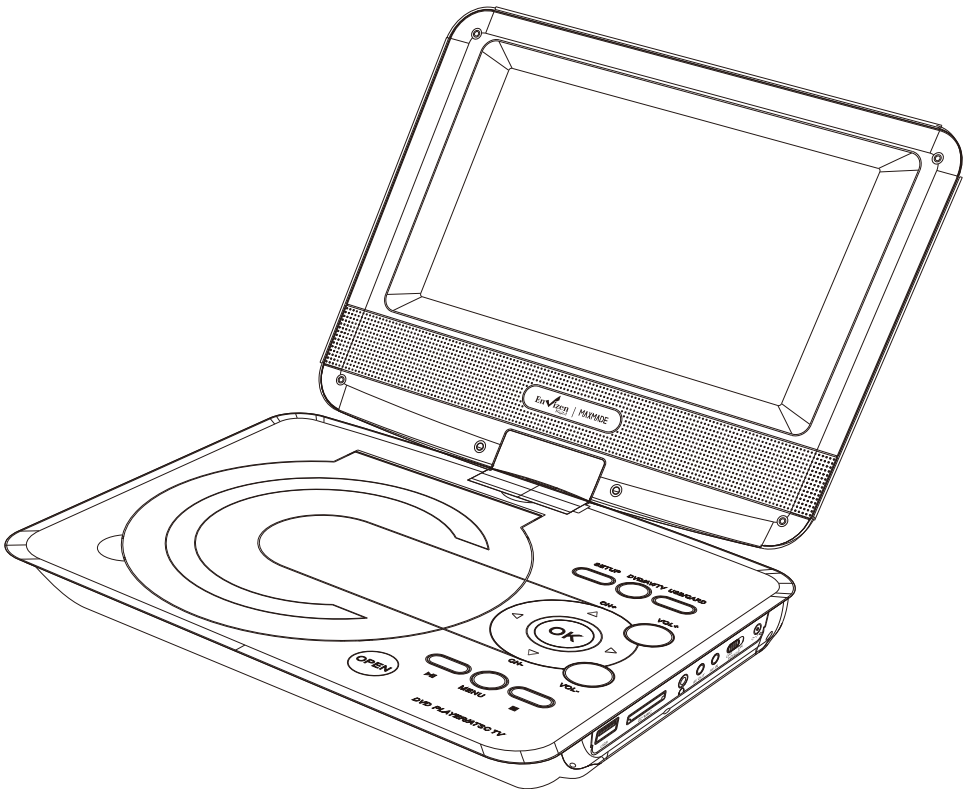


Device Overview

► Front Panel

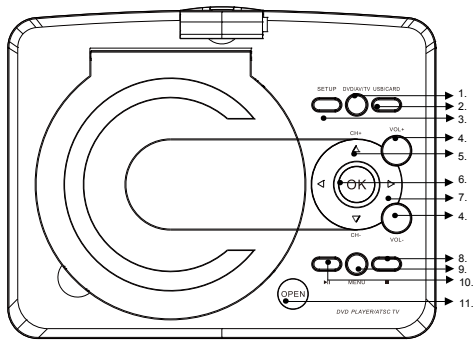


- 1.Switch DVD / AV / TV
- 2.Switch USB / CARD
- 3.Setup
- 4.Vol +/ Vol -
- 5.▲: Previous Chapter / Next Channel Selection
▼: Next Chapter / Previous Channel Selection
- 6.OK : Play (DVD) / Confirm your selection (ATSC)
- 7.◀: Rewind / Left Navigation
▶: Fast Forward / Right Navigation
- 8.Stop disc play
- 9.Accesses / Exits the setup menu
- 10.Play/Pause
- 11.Push Open

► Side Panel

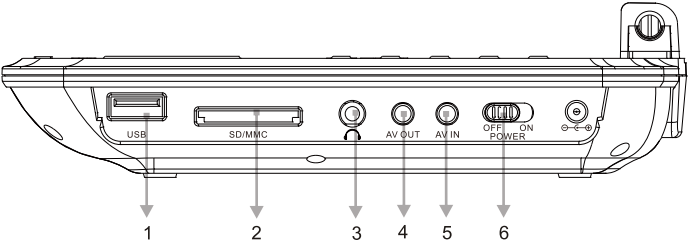


- | | |
|------------------|-----------|
| 1. USB Port | 4. AV Out |
| 2. Card Reader | 5. AV In |
| 3 Headphone Port | 6 Power |

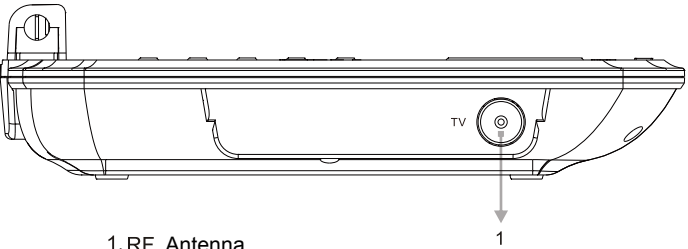

- 1.RF Antenna


Remote Control

► Remote Control Functions

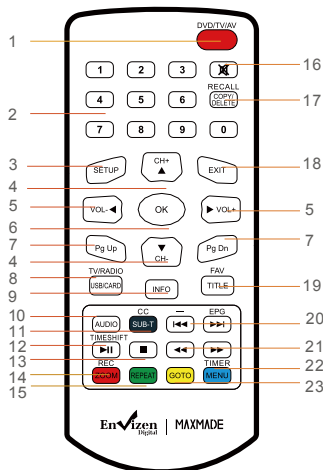


1. Switch DVD / TV / AV
2. Numeric Keypad 0-9
3. Setup : accesses or exits the setup menu
4. CH+/- : switch to the next / previous channel
5. ◀▶ : Navigation
Vol +/- : decrease / increase volume
6. Play (DVD mode)
Confirm your selection (ATSC mode)
7. To navigate inside the menus.
8. Switch USB / Card (DVD mode)
Switch between Digital Radio and ATSC modes.
9. Display program information (ATSC mode)
Display playback information (DVD mode)
10. Switch languages that the disc supports
11. Switch OSD languages (DVD mode)
Closed Caption (ATSC mode)
12. Play / Pause/ Timeshift
13. Stop disc play (DVD mode)
14. Zoom in or out the current picture (DVD mode)
REC
15. Repeat Chapter (DVD mode)
16. Mute
17. Copy / Delete the files (DVD mode)
Recall channel playback (ATSC mode)
18. Exit
19. FAV: Setup favorite programs (ATSC mode)
Title
20. ◀◀/▶▶: Skip Backward / Forward
Program Guide (ATSC mode)
21. ◀◀/▶▶: Fast Backward / Forward
22. Menu playback (DVD mode)
Timer
23. GOTO: Search progress (DVD mode)

► Remote Control

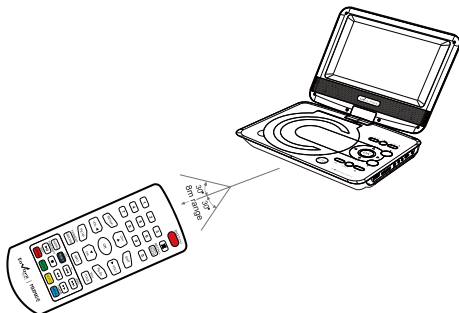


DVD Player

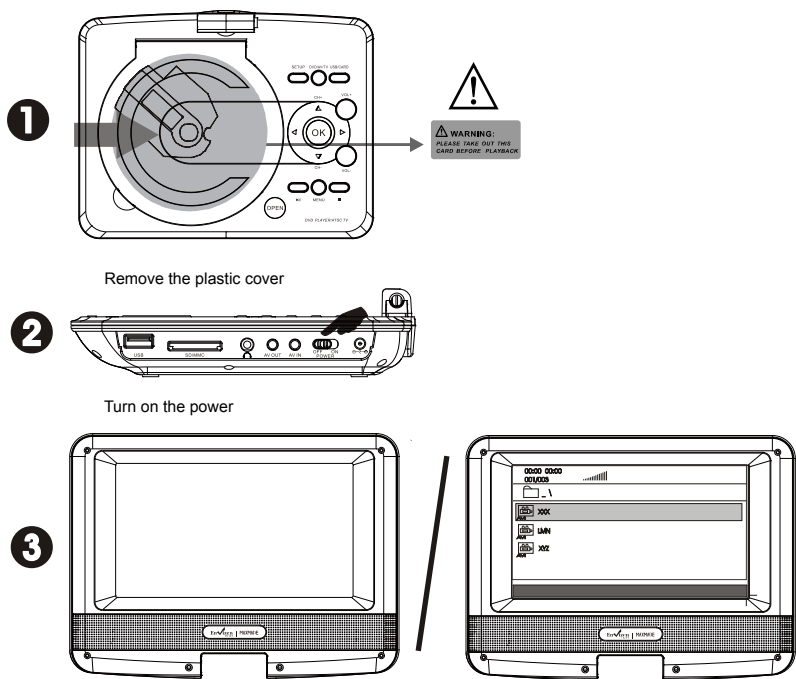

When you are playing a commercial DVD, the menu is displayed automatically.
When you are playing a DVD-R, CD, etc. a menu like the one above is displayed on the screen.
Select the file that you want to play with the ▲ or ▼ arrows on the remote control or with the ◀◀ or ▶▶ arrows on the player then press ENTER.

AV input/output

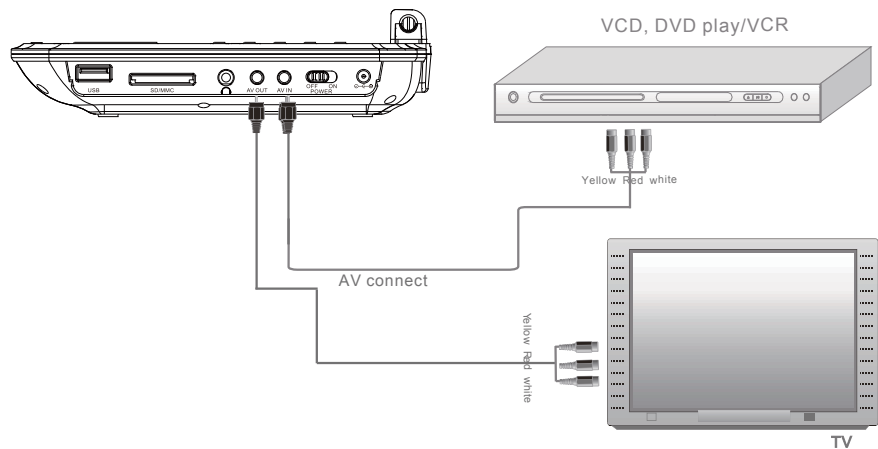


Notice: Please turn off all devices before connection.
As shown in the picture, use the A/V cable to connect the portable TV player with other devices.
Switch the portable TV player to AV mode.

SETUP Menu

DVD Setup


The setup menu consists of four sub-menus, General Setup, Audio Setup, Video Setup, and Preference Setup.

This menu is accessible with the SETUP button on the remote control or on the device. To navigate through the different sub-menus, use the ◀ and ▶ arrows; to navigate through the different options of the sub-menus, use the ▲ and ▼ arrows on the remote control.

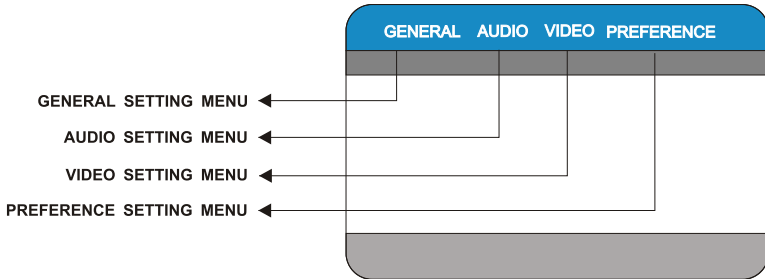

Digital TV Setup

If you are using the unit for the first time or have restored the unit to factory default, the installation guide menu will appear on your TV screen.

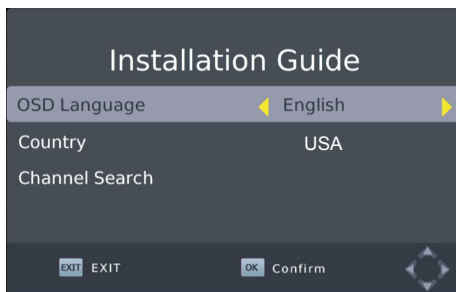


- (1) [OSD Language] press RIGHT/LEFT key to select a language.
- (2) [Country] press RIGHT/LEFT key to select your country of residence.
- (3) [Channel Search] press RIGHT or OK key to begin Automatic channel search.
- (4) Once channel tuning is complete, you can start watching TV programs.

Power Supply Connection

You have 3 options to supply power for the device.


► AC Adapter

Connect the supplied 9-12 volts AC adapter to the player and to the power outlet. While this device is charging through the AC adapter, the internal battery will be charged at the same time. The charge indicator turns red while charging, the charge indicator turns off when the battery is fully charged. The Built-in rechargeable battery allows portable usage for up to 2.5 hours.

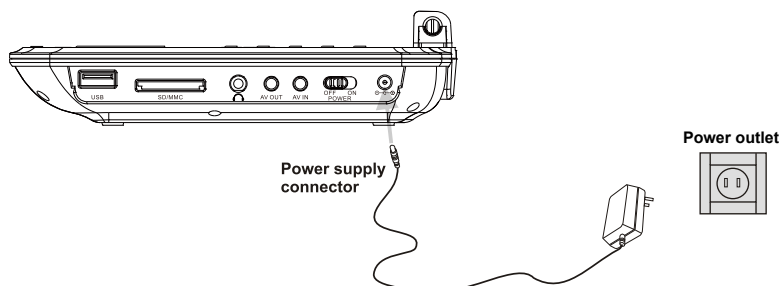

► Car Adapter

Connect the car adapter (supplied with your device) as indicated below. **Caution!** Do not use any other cords but the one supplied with your product. The power supply voltage is 9-12 Volts, you must check if your vehicle voltage complies with this range Voltage before connecting. Be sure to unplug the adapter when you leave the vehicle.

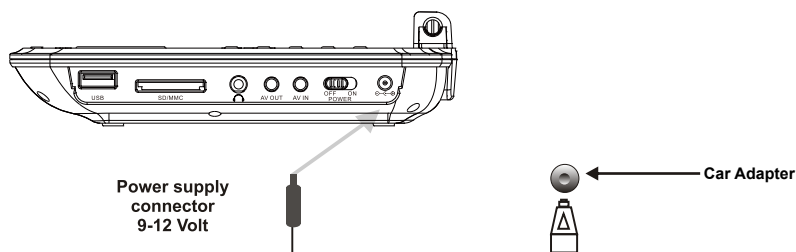

► Rechargeable Internal Battery

Operating instructions: The internal battery automatically charges when the device is connected to the AC adapter through a main power outlet. The internal rechargeable battery lasts up to 2.5 hours while fully charged.


Warning: To prevent fire or shock hazard, do not expose the device to water, rain, or moisture.

Never expose battery pack to temperature above 140 °F.


Do not disassemble

Do not incinerate


USB/CARD



Switch " on "

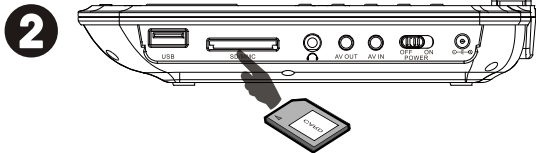


Insert the SD/MMC card in the slot located at the side of the player

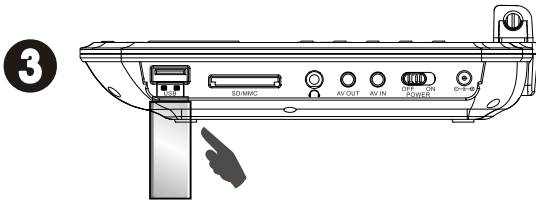


Insert the USB in the slot located on the back of the player

Digital TV

To access the menu, press MENU and select [Search Channel] using the RIGHT/LEFT keys. This menu provides options to adjust the search channel settings. Press UP/DOWN to select an option and press RIGHT/LEFT to adjust the setting . Press EXIT to exit the menu.

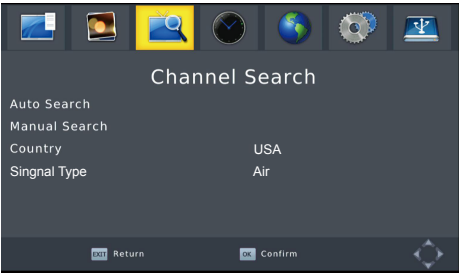

Auto Search will automatically search for channels and save them once the scanning is complete. All previously saved channels and settings will be deleted.
(1) Select [Auto Search] and press OK or RIGHT to start channel search.
(2) To cancel channel search, press EXIT. Any channels that have been found will be saved.

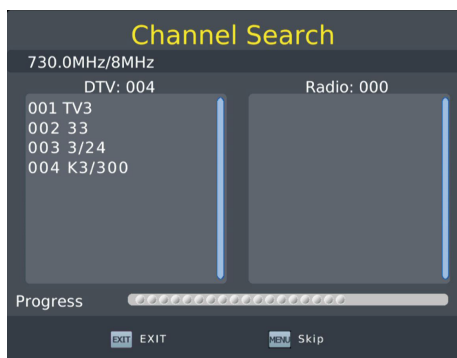

Car Seat Attachment

You can enjoy movies in the car by attaching the unit to the back of the headrest of the front seat.

Note: Please insert the disc before attaching the unit to the headrest mounting bracket.

► **Attach the headrest mounting bracket to the back of the headrest of the front seat.**

Adjust the headrest so there is an open space of about 1 inch.

Close the buckle and adjust the belt until it fits tightly around the headrest.



► **Please be sure that the bracket is securely fastened to the unit and cannot be lifted upwards.**

► **Unzip and open the unit, sit back and enjoy.**



► **Release buckle**

Press the release buckle on the back of the bracket.

Lift the unit up to release it.

Note: Do not press the release button unless detaching the unit from the bracket.